PARTS LIST

for

Whirlpool

24″ ELECTRIC BUILT-IN CONTINUOUS CLEAN OVEN

MODEL

RB120PXK-0

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

Whirlpool CORPORATION
Benton Harbor, Michigan.

12-81 Litho in U.S.A.

Part No. 980591

161-C-9

OVEN PARTS

For Model: RB120PXK-0

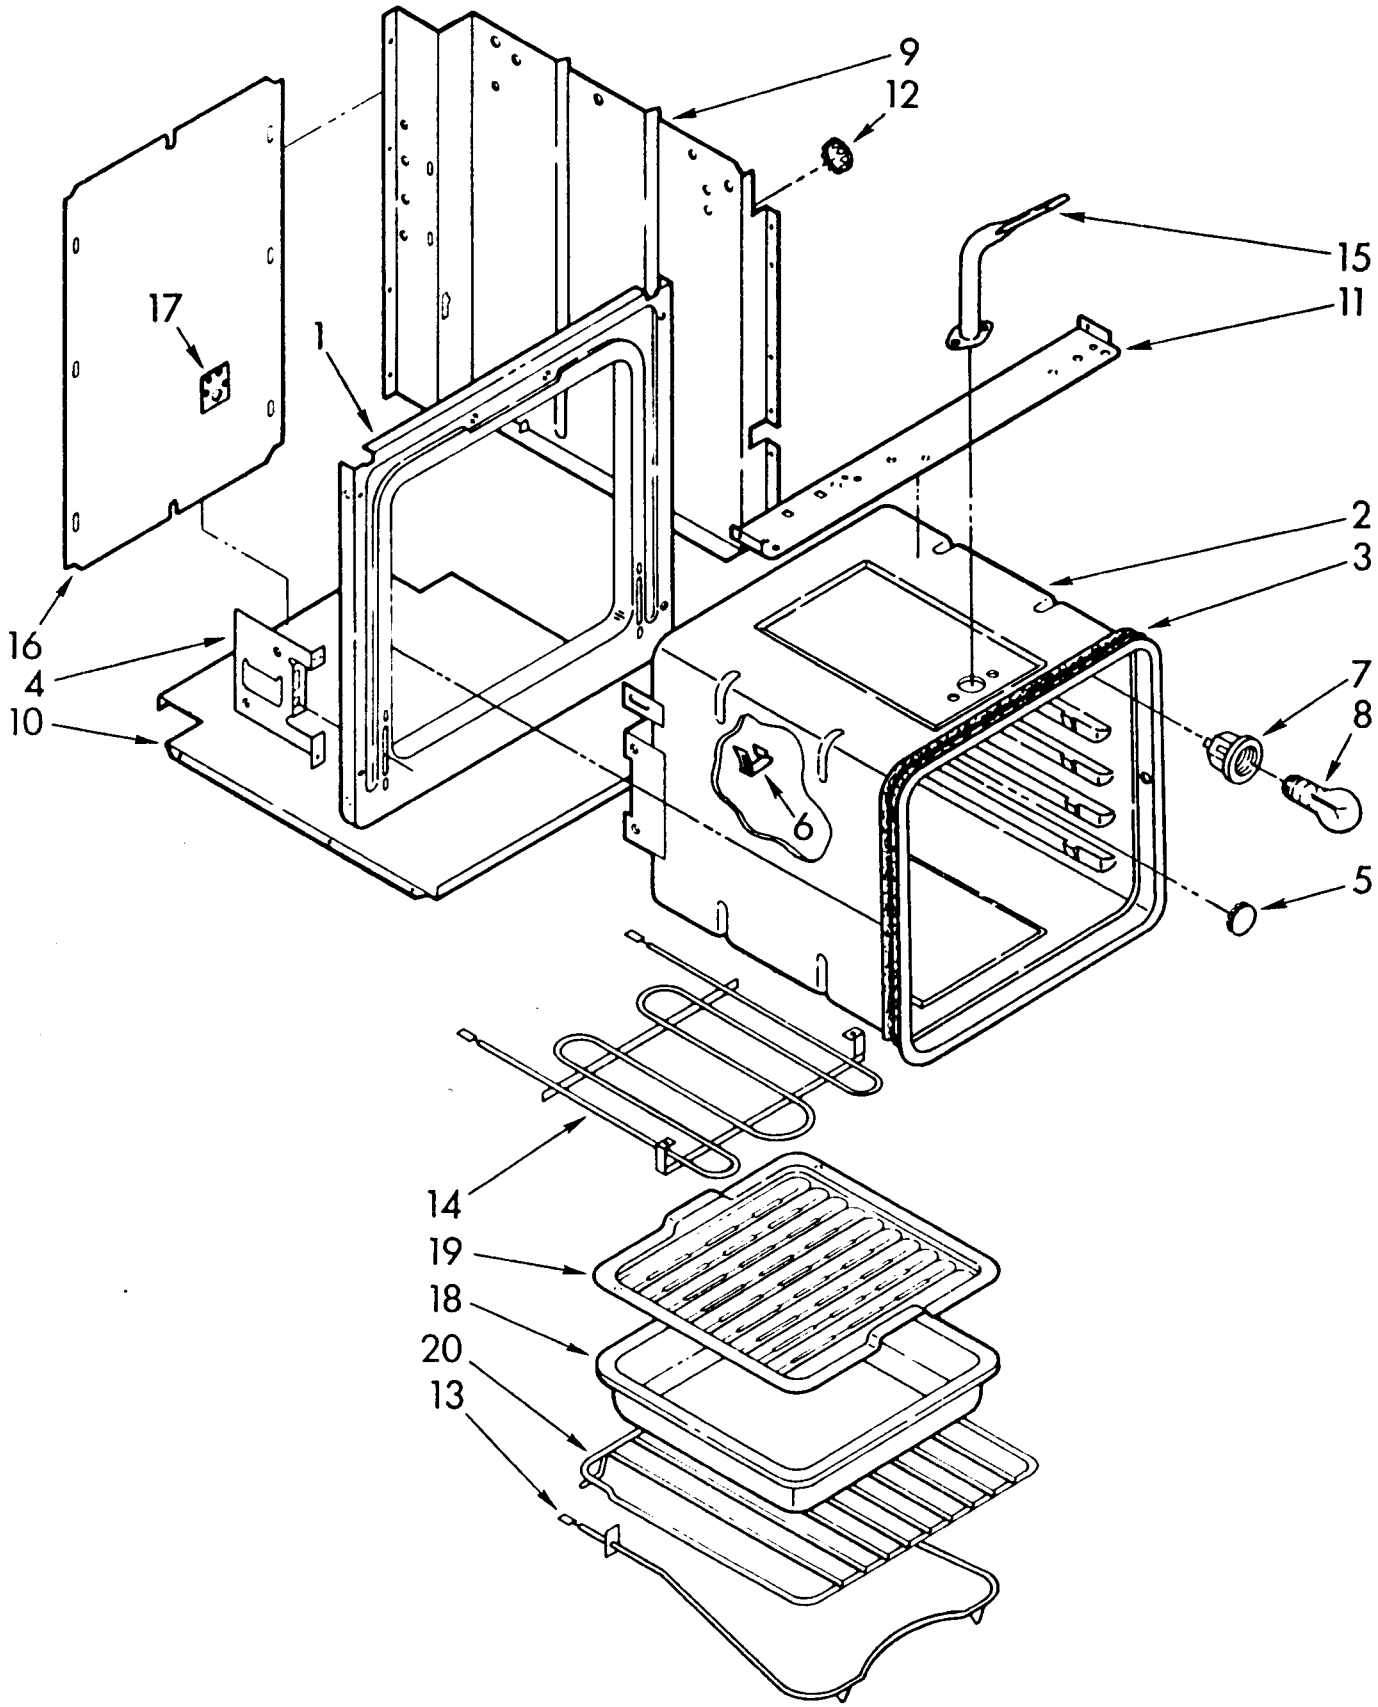

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: RB120PXK-0

Illus. No.	Part No.	DESCRIPTION
		Note: The Screws and Nuts Required To Attach A Part Are Listed Immediately Following That Part
1	329040	Front Frame
	338177	Clip (6)
2	328083	Oven (24" Continuous Clean)
	311056	Screw (8)
3	252412	Seal, Oven
4	257807	Hinge Plate (2)
	342043	Screw (4)
5	257314	Plug Button
6	258139	Clip, Therm Bulb (2)
7		Socket, Oven Light
	307856	Alternate
	310208	Alternate
	308043	Screw, 10-12 x 7/8 (2)
8	311255	Bulb, Oven Light
9	311919	Side Wrapper (2)
	338156	Screw, 8A x 1/2 (6)
	253549	Screw, 10A x 1/2 (4)
10		Cover
	252687	Bottom
	312004	Top
	253549	Screw, 10A x 1/2 (8)
11	255575	Baffle, Top Insulation
	253549	Screw, 10A x 1/2 (2)
	246127	Screw, 10-32 x 5/8 (2)
12	258112	Plug, Button
13		Unit, Bake
	310216	Alternate
	257987	Alternate
	246127	Screw, 10-32 x 5/8 (2)
14		Unit, Broil
	311714	Alternate
	311713	Alternate
	246127	Screw, 10-32 x 5/8 (2)
15	311382	Vent, Built-In Oven
	253549	Screw, 10A x 1/2
	246132	Screw, 8A x 3/8
16	257975	Cover, Rear
	253549	Screw, 10A x 1/2 (10)
17	252978	Plate, Service
18	263062	Pan, Broil
19	263063	Rack, Broil Pan
20	254426	Rack, Oven (2)

CONTROL PANEL PARTS

For Model: RB120PXK-0

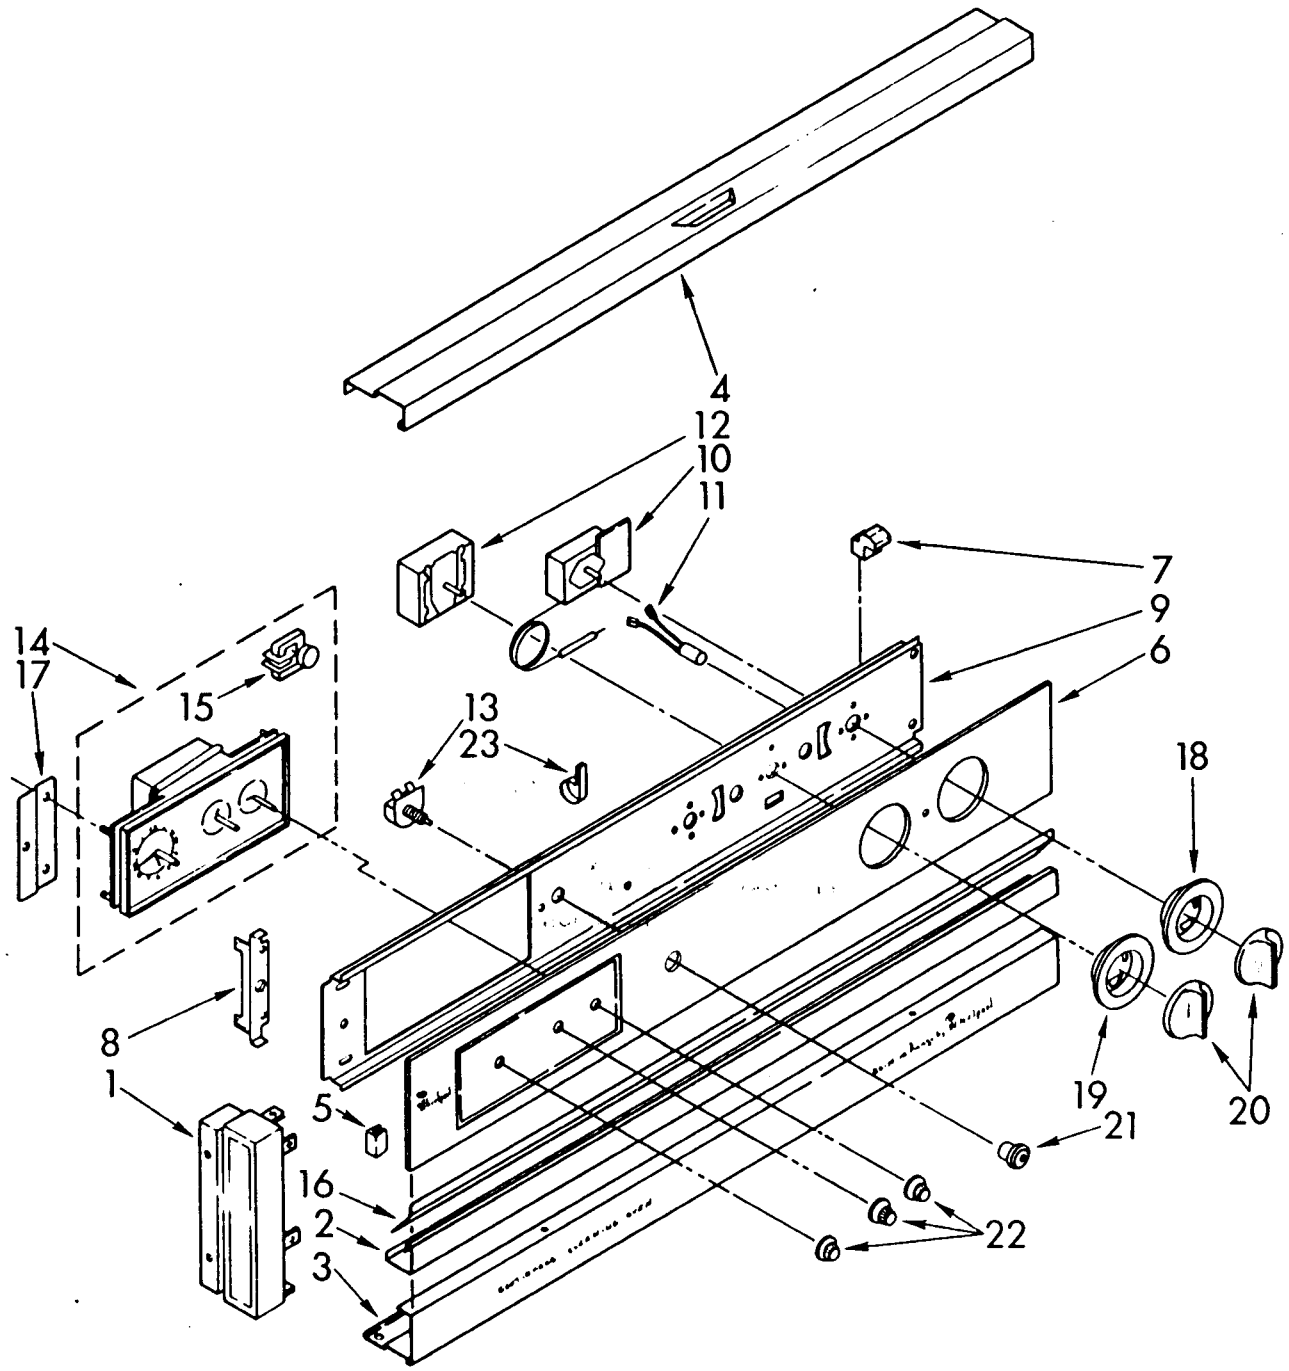

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RB120PXK-0

Illus. No.	Part No.	DESCRIPTION
		Note: The Screws and Nuts Required To Attach A Part Are Listed Immediately Following That Part
1		End Cap
	311375	Right Side
	311376	Left Side
	338156	Screw, 8A x 1/2
2	311193	Trim, Center
3	311455	Trim, Bottom
	246132	Screw, 8A x 3/8 (2)
	258856	Screw (2)
	345304	Screw, 8 x 3/8 (2)
4	312002	Trim, Upper
5	310842	Channel, Rubber
6	311380	Panel, Control Glass
7	310823	Retainer, Glass (4)
8	311372	Bracket, Control Panel (2)
	345304	Screw, 8 x 3/8 (4)
9	311377	Control Bracket
10		Thermostat
	310862	Alternate
	311496	Alternate
	487384	Screw, 6-32 x 1/4 (2)
11	308753	Indicator Light (250V)
12	310866	Selector Switch (4 Position)
	155023	Screw, 8-32 x 1/4 (2)
13	308829	Switch, Oven Light
	255912	Nut, 3/8 x 27 (1)
14		Timer, Automatic
	311262	Alternate
	310940	Alternate (Includes Illus. 15)
	308846	Palnut (Timer)
15	309822	Motor Timer
16	255893	Seal, Backguard
17	310943	Bracket, Timer
	246132	Screw, 8A x 3/8 (4)
18	311071	Escutcheon, Thermostat
19	311069	Escutcheon, Selector
	254225	Screw, 8BT x 1/4 (2)
20	310834	Knob, Control (2)
21	308784	Bezel, Switch
22	309553	Knob, Timer (3)
23	255563	Clip, Strain Relief (2)
	246076	Screw, 10-24 x 3/8
	246127	Screw, 10-32 x 5/8 (3)

LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION
		OPTIONAL PARTS NOT INCLUDED
		SPLICING WIRES—25 FT. LENGTH
	242828	Wire, Black 12 Ga. 150°C
	242820	Wire, Black 14 Ga. 150°C
	242821	Wire, Blue 14 Ga. 150°C
	242822	Wire, Brown 14 Ga. 150°C
	242830	Wire, Brown 14 Ga. 200°C
	242823	Wire, Green 14 Ga. 150°C
	242824	Wire, Orange 14 Ga. 150°C
	242829	Wire, Red 12 Ga. 150°C
	242825	Wire, Red 14 Ga. 150°C
	242831	Wire, Red 14 Ga. 200°C
	242826	Wire, White 14 Ga. 150°C
	242832	Wire, Yellow 14 Ga. 200°C
		REFINISHING MATERIAL
	799832	Kit, Porcelain Repair (White)
	261810	Touch-Up Oven (1 Oz.)
	261582	Grease
		PAINT, TOUCH-UP (1/2 OZ.)
	72017	White
	72107	Almond
	72109	New Avocado
	72108	Coffee
	72110	Harvest Gold
	**511873	White Porcelain (2 Oz.)
		PAINT, PRESSURIZED SPRAY (13 OZ.)
	350930	White
	350956	Almond
	261888	New Avocado
	261886	Coffee
	261890	Harvest Gold
	285006	Superior Black
	206922	Primer (White)
	206925	Leveler (Thinner) (2 Oz.)
		PAINT, BULK (1 Qt.)
	*799344	White (Uncut)
	*978883	Almond (Uncut)
	*261889	New Avocado (Uncut)
	*261887	Coffee (Uncut)
	*261891	Harvest Gold (Uncut)
	799351	Thinner (1 Gal.)
		*Special Thinner 799351 Required
		INSULATION
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25')
		LITERATURE PARTS
	311435	Installation Instructions
	311418	Guide, Use & Care
	308500	Book, Cooking Guide
	980591	List, Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

161-C-13

DOOR PARTS

For Model: RB120PXK-0

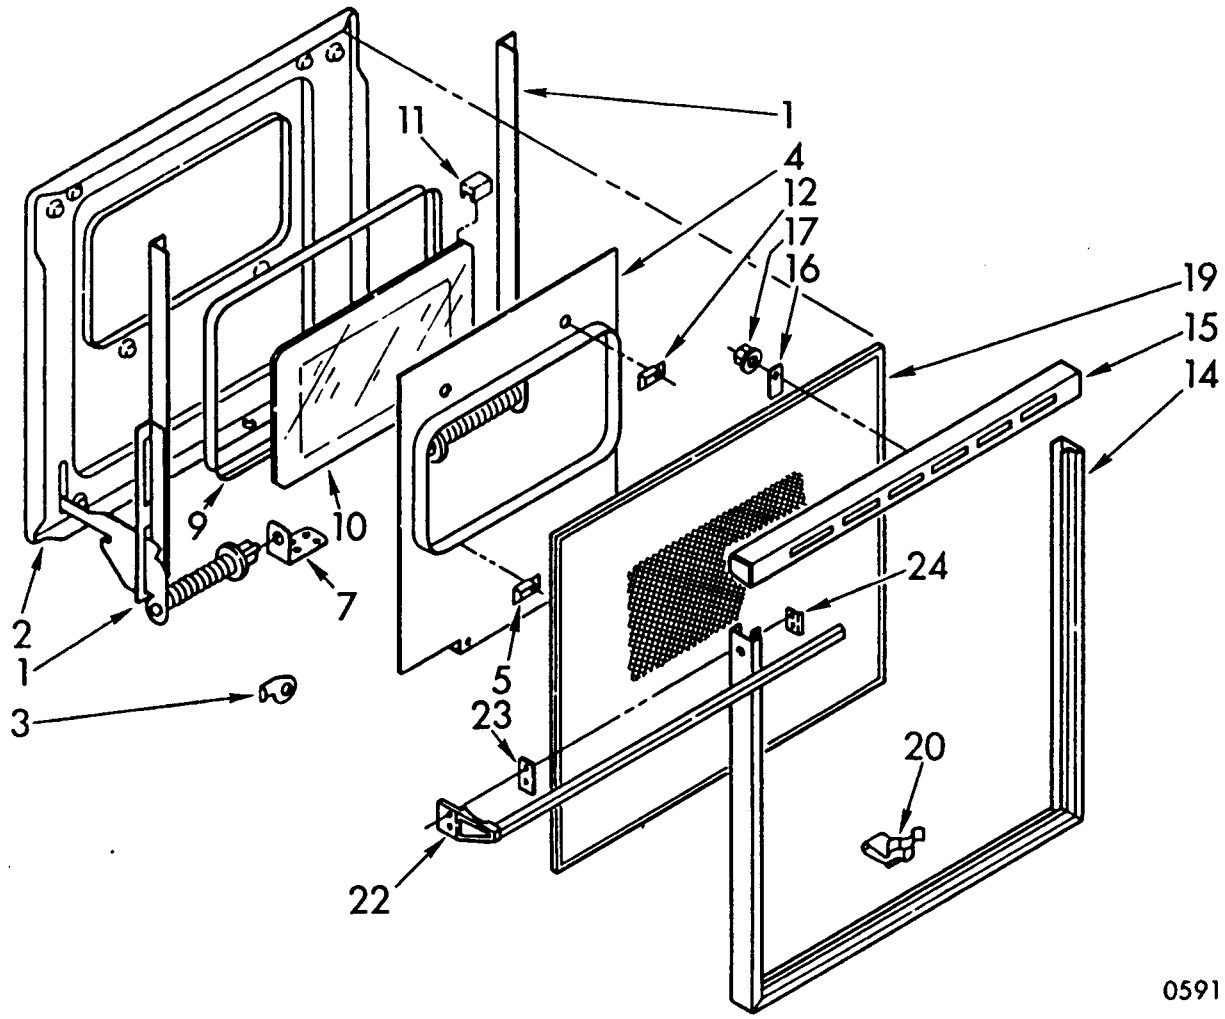

Illus. No.	Part No.	DESCRIPTION
		Note: The Screws and Nuts Required To Attach A Part Are Listed Immediately Following That Part
1.		Bar, Torsion
	327741	Right Hand
	327742	Left Hand
	343641	Screw, 10-16 x 1/2 (4)
	255280	Pushnut (2)
2	328116	Liner, Door 24" cc
	229364	Washer, Fibre
	254217	Screw, 10A x 3/8 (2)
	307748	Screw, 10A x 1/2 (2)
	258093	Nut, Snap-In (2)
	311056	Screw (8)

Illus. No.	Part No.	DESCRIPTION
3	270974	Kit, Door Stop Replacement
4	258991	Baffle
5	258990	Spacer, Baffle (2)
	307748	Screw, 10A x 1/2 (2)
7	258921	Support, Torsion Bar (2)
	338156	Screw, 8A x 1/2 (2)
9	307852	Seal, Window
10	258989	Glass, Inner
11	255859	Channel Rubber (4)

Illus. No.	Part No.	DESCRIPTION
12	258990	Spacer, Baffle
	253549	Screw, 10A x 1/2 (2)
14	311459	Frame, Door
15	311460	Top, Door Frame
16	310705	Hold-Down, Glass
17	308593	Pushnut
19	311589	Glass, Outer
20	310706	Clip, Glass (7)
22	311571	Handle, Door
	308541	Screw (4)
23	310707	Spacer, Handle
24	311506	Clip (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

161-C-14